

# Moldplus Server V6.0



## User Guide

Revision date: June 24, 2020

# TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	<b>3</b>
<b>PRODUCTS SUPPORTED BY MOLDPLUS SERVER V6.0</b> .....	<b>4</b>
<b>WHAT'S NEW IN VERSION 6.0</b> .....	<b>4</b>
NEW SIM DETECTION METHOD.....	4
WIBU NETWORK SERVER SUPPORT .....	4
STREAMLINED USER INTERFACE.....	5
<b>CUSTOMER REQUIREMENTS:</b> .....	<b>8</b>
<b>INSTALLATION PROCESS</b> .....	<b>10</b>
<b>FOLDER LOCATIONS</b> .....	<b>14</b>
<b>AFTER INSTALLATION</b> .....	<b>15</b>
MOLDPLUS SERVER CONFIGURATION – NETHASP SIM.....	15
MOLDPLUS SERVER CONFIGURATION – WIBU NETWORK SIM .....	18
<i>XML License Registration Process:</i> .....	19
UPDATE XML LICENSE PROCESS .....	23
<b>UNINSTALLATION</b> .....	<b>25</b>
<b>CLIENT COMPUTER LICENSE CONFIGURATION</b> .....	<b>27</b>
<b>NETWORK LICENSE MONITOR</b> .....	<b>29</b>
1.1 MOLDPLUS LICENSE SERVER MANAGER.....	29
1.2 <i>Moldplus Licenses Operation</i> .....	33
1.3 <i>Moldplus Temporary Licenses</i> .....	33
<b>TROUBLE-SHOOTING</b> .....	<b>33</b>
2.1 NETHASP LICENSE MANAGER NOT INSTALLED .....	33
2.3.3 <i>Moldplus Server Diagnostic Tool</i> .....	35
<b>CONCLUSION</b> .....	<b>37</b>

## Introduction

This document is designed to assist you with properly installing and configuring Moldplus Server Version 6.0 on your Mastercam Network license management system.

The installation program for Moldplus Server V6.x is designed to install the required files for Moldplus Server to function along with:

- a. the Aladdin HASP License Manager for Mastercam for NETHASP SIMS
- b. WIBU Codemeter software install
- c. Sentinel NETHASP SIM Driver
- d. Relevant Firewall exceptions for the Sentinel drivers and Moldplus Service

An assumption is made that you have ALREADY PROPERLY CONFIGURED THE ABOVE license servers for Mastercam and taken the necessary precautions to ensure smooth operation of above systems.

Moldplus Server is designed to work along with the above licensing systems. The Moldplus Server executable enables users to use Moldplus software solutions in a network environment. The number of licenses you purchase for Moldplus products limit the number of licenses you can run at any given time. The license information is stored in an XML file that is provided by Moldplus SA and configured with the Server software.

The concept behind using Moldplus products in a network environment is to enable multiple users to use the relevant Moldplus product from different workstations, using only one software protection module from a station that is called the Moldplus Server.

The Moldplus Server **installation should be performed** on:

1. A 64 bit operating system
2. the **system that has the NETHASP SIM physically installed.**
3. For **WIBU NETWORK** servers, the **Moldplus Server** needs to be **installed** on the computer **where the WIBU NETWORK Server is installed and activated/managed.**  
**This server has to be on a different computer from a client computer.**

To perform the **Moldplus Server V6.x installation** on a **server for the first time with the NETHASP SIM** (even if you uninstall the Moldplus Server V5.4), it is **imperative** that **someone is physically present at the Server** to interact with the SIM as they will be asked to disconnect and connect the NETHASP SIM during the process. Maintenance license updates can be done remotely and without stopping the Moldplus Server.

## Products supported by Moldplus Server V6.0

Moldplus products are supported to run under the Moldplus Server Manager for versions of **Mastercam 2021 and below up to Version 9.1**

**WIBU Network licensing** is only supported for **Mastercam 2019 and above**.

**NOTE:** - Moldplus Maintenance dates are independent of the Mastercam maintenance dates. The dates displayed in the Moldplus Server manager will indicate when the Moldplus maintenance will expire.

## What's new in Version 6.0.

This is a major update of the Moldplus Server since the release of the last version. Studying the installation process and challenges faced by our clients over the years, we have streamlined the process as much as possible to help ease the installation and configuration process.

Some of the main highlights include:

1. Implemented new NETHASP SIM detection mechanism. (NETHASP SIM mode can be configured as NETWORK or LOCAL for Mastercam.)
2. Support for the Mastercam WIBU NETWORK licensing.
3. Firewall exceptions for the Moldplus Service automatically added using the new installation software package during the installation process.
4. Streamlined the User Interface of the Server solution to minimize the interactions for the end-user.
5. Automatically launch the Service and Server upon code registration and installation completion.
6. Automatically select all available IP addresses for the Server if no IP address is chosen.
7. License update process only involves registering a new XML license provided using the **Register license** button from the License Manager dialog. There is no need to stop or start the server to do this.

### ***NEW SIM detection method***

Moldplus Server uses a new mechanism to identify the existence of the NEHASP SIM on the computer. The Mastercam SIM setting mode does not affect Moldplus Server 6.0.

### ***WIBU NETWORK Server support***

Moldplus Server functions with the WIBU NETWORK server.

## Streamlined User Interface

Moldplus Server interface has been improved to display the minimal information to the end user when launched. Prompts in the LOG tab help walk the end user through the installation process. Upon successful license registration, the Server is automatically launched.

Moldplus License Server Manager 6.0.0

Sim Number: **9876543**

Host name: **ABC\_Server**

IP# to use: 192.168.1.33

Port: 897

Register license: **M-ABC\_Client\_M219-1234\_s.xml**

Server Running

View lic file

View log file

Help

Log | Licenses

	Level Id	Level Name	Date	Type	#Used Seats	#Seats
1	1	Moldplus Standard	Fri Jan 31 2020	M	0	10
2	3	Moldplus Professional	Fri Jan 31 2020	M	0	10
3	5	Moldplus 5 Axis Toolkit	Fri Jan 31 2020	M	0	10
4	6	Moldplus 5 Axis Toolkit Professional	Fri Jan 31 2020	M	0	10
5	7	Moldplus STL Utilities	Fri Jan 31 2020	M	0	10
6	8	Moldplus Plate Fixture Design	Fri Jan 31 2020	M	0	10
7	11	Moldplus CATIA V5 Read	Fri Jan 31 2020	M	0	10

MOLDPLUS  
Makes the difference

Close

Viewing the Log tab will display the status of the Server.

IP# to use: 192.168.1.33

Port: 897

Register license: **M-ABC\_Client\_M219-1234\_s.xml**



Server Running

Log | Licenses

Server started  
Detecting connected SIM...  
Local NetHasp found, start monitoring.

T

Additional buttons for Starting and Stopping the Server are only displayed when the Server interface is launched using the Admin mode.

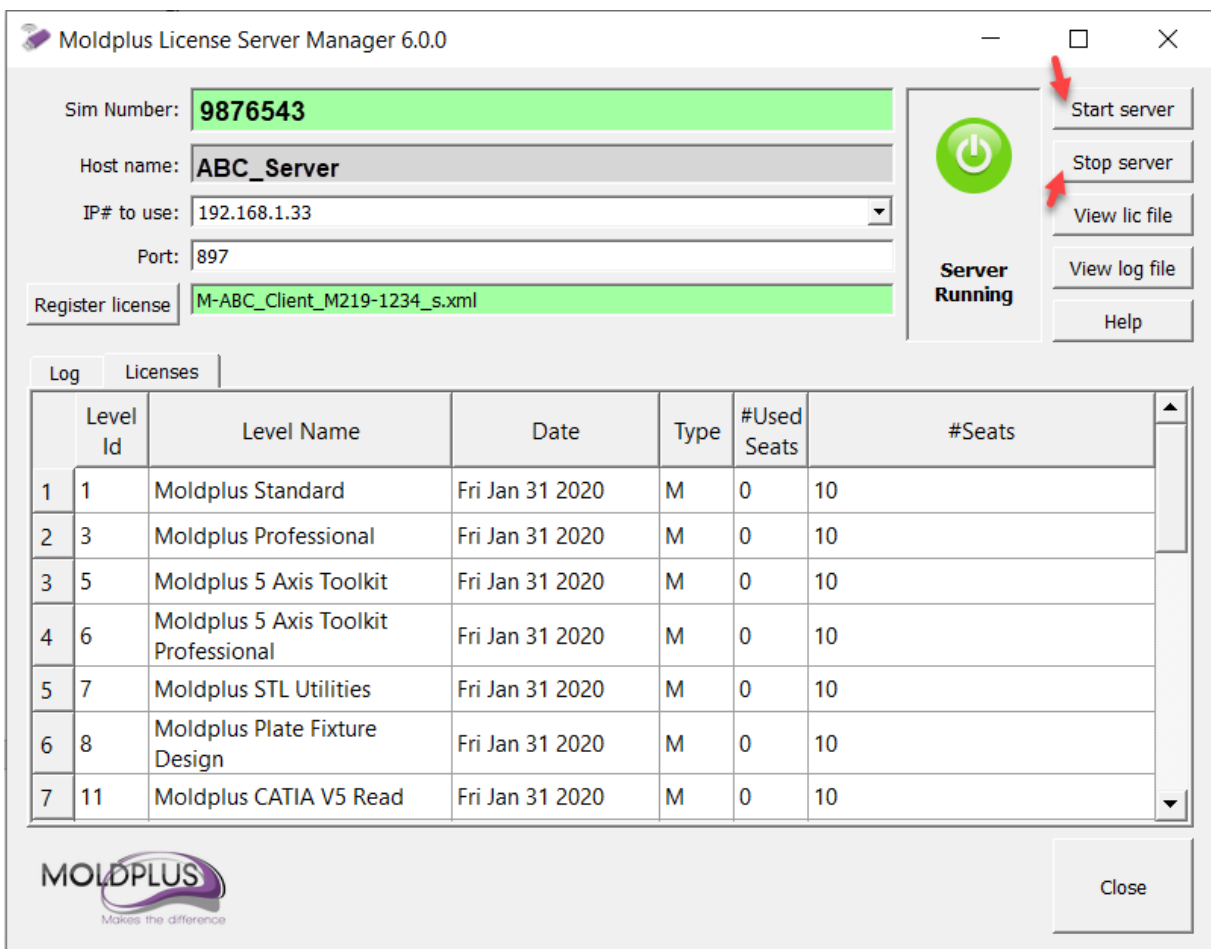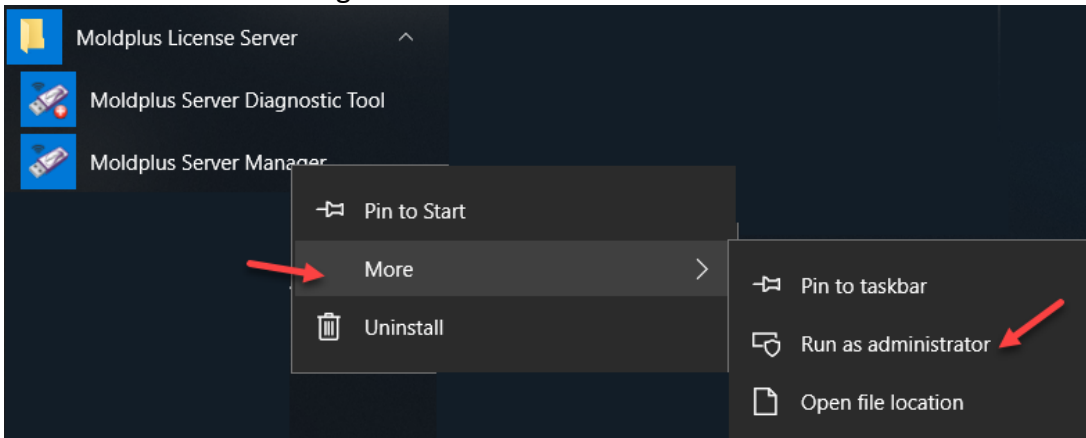

The following is a summary of the bugs fixed and improvements.


### **Enhancements:**

- [MLDSV-86] - Remove the service account setting
- [MLDSV-89] - Support for WIBU Network licensing
- [MLDSV-91] - Switch to Advanced Installer for application packaging
- [MLDSV-101] - Show Start and Stop buttons when Manager is started with Admin rights
- [MLDSV-102] - Automatically restart server on config update
- [MLDSV-85] - Minor UI improvements
- [MLDSV-87] - Restore Manger size and position
- [MLDSV-94] - Improve log messages and responsiveness
- [MLDSV-95] - Include Moldplus logo as the images for the installer
- [MLDSV-97] - Remove start / stop buttons from the manager
- [MLDSV-98] - Automate packaging
- [MLDSV-99] - Choose all IP addresses by default when no IP is selected
- [MLDSV-75] - Improve robustness of key mapping storage
- [MLDSV-79] - Add explicit message when service cannot be started because of user rights
- [MLDSV-80] - Use SimAccess for key validation only and sentinel info for monitoring
- [MLDSV-74] - Implement more robust Local NetHasp detection mechanism

### **Bugs Fixed**

- [MLDSV-83] - Clients cannot connect to the new Moldserv beta
- [MLDSV-84] - Moldserv is sometime unresponsive
- [MLDSV-82] - Moldserv cannot validated some sentinel key types
- [MLDSV-72] - Moldserv does not detect NetHasp local with latest drivers

## Customer Requirements:

1. The Windows Server Operating System is a **64bit operating system**.
  2. Please make sure you are **logged on as Administrator** or with administrative privileges, before performing the installation.
  3. During the installation process, the installation will check to see if **Visual Studio 2008 SP1 Redistributable package is installed**. If it is not installed, it will launch the dialog to install this package. This installation is included in the Moldplus Server install.
  4. Moldplus Server will NOT FUNCTION WITH a regular HASP SIM!
  5. Ensure that ONLY the Mastercam NETHASP SIM is connected to the computer during the configuration process. Any other Sims will need to be disconnected till the configuration process is complete.
  6. Have the Moldplus products XML license file available to configure upon completion of Moldplus Server installation. Your reseller should have provided you the XML license file that is related to your NETHASP SIM.
- a. Configuring for a WIBU NETWORK**
7. The **Moldplus Server 6.0 is installed** on a **dedicated computer** as the **Server**. **It cannot be installed on a client computer and attempted to run as WIBU, Local..** Moldplus Server will not check out a license for a client using the WIBU Server as a local computer! **The Moldplus product licenses can only be checked out on computers where the license is identified as a WIBU NETWORK.**
- b. Configuring with a NETHASP SIM**
8. Ensure that someone is physical present at the Server computer for installing the Moldplus Server V6.x software for the very first time. The SIM identification process requires someone to disconnect and connect the SIM when prompted!
  9. If you haven't installed the Aladdin Hasp License Manager software, please **perform the installation**. (Installation software LMSETUP.EXE also provided with the Moldplus Server 5.4 installation from the *\Program Files\Aladdin\HASP LM\Additional Files\* folder). To verify that the Nethasp License Manager is installed and running on your system, you will notice an icon on the bottom right  for NetHasp License Manager 8.32



10. To ensure that the NETHASP SIM is properly identified, you can go to an Internet Explorer and type the following:

**[http://localhost:1947/\\_int\\_/devices.html](http://localhost:1947/_int_/devices.html)**

This should list the NETHASP SIM's (or HASP SIM's) that are connected to the Server computer. If the NETHASP SIM is not listed OR there is a problem identifying the SIM, then the Moldplus Server configuration will not work! Additionally, if there are multiple SIMs connected to the Server, this will also impede the proper installation and configuration of the Server!

11. **The Sentinel drivers installed on the Server are V7.8 and require the port 1947 to be free for UDP and TCP.** The installer will add these Firewall exceptions during the installation process. If you had installed these drivers manually, please ensure that you ADD THESE PORT EXCEPTIONS MANUALLY to the system FIREWALL for incoming and outgoing transmissions.


12. The Hasp License Manager will be installed as a Windows Service. The Firewall Exception will be created for the Moldplus Server during the installation process.

13. The maximum number of simultaneous users allowed with Moldplus License Manager is limited to 100.

14. If all the above precautions have been taken, the installation process and configuration should be smooth.

## Installation Process


The Moldplus Server installation runs as follows:

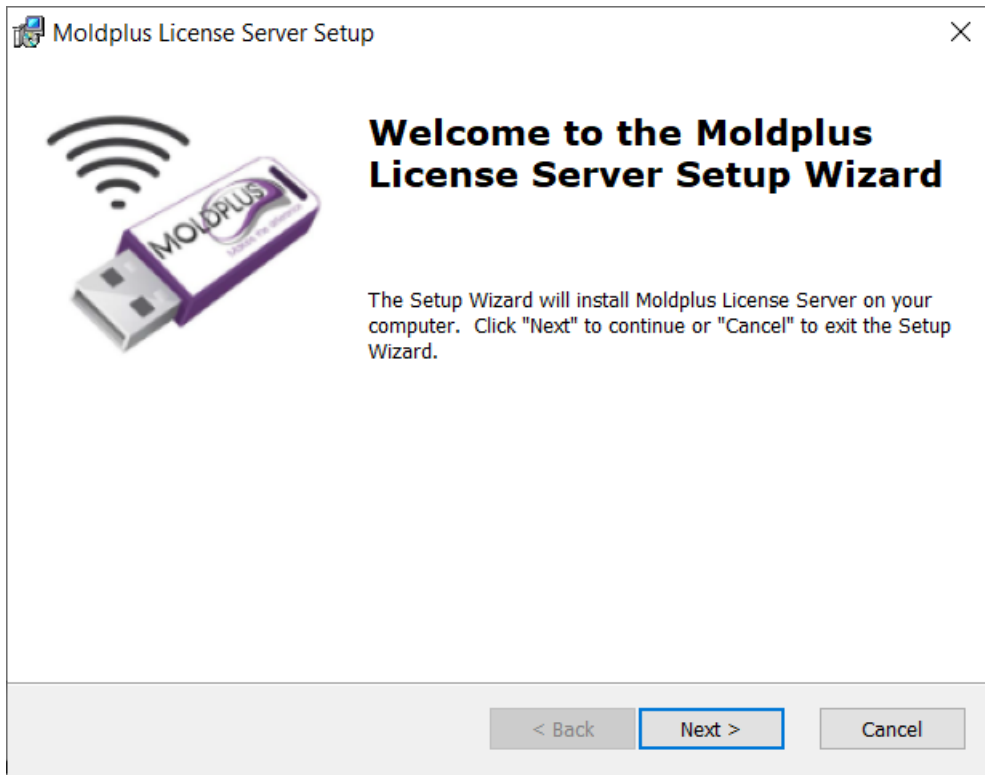


1. Launches the installation and presents the welcome screen as shown above.
2. Performs a check to see if you running with administrative privileges before proceeding.

The install also checks to see if you have administrative rights. If you do not, the installation aborts!


3. Displays the Moldplus License Agreement. Click on **Yes**, after reading the License agreement to continue.

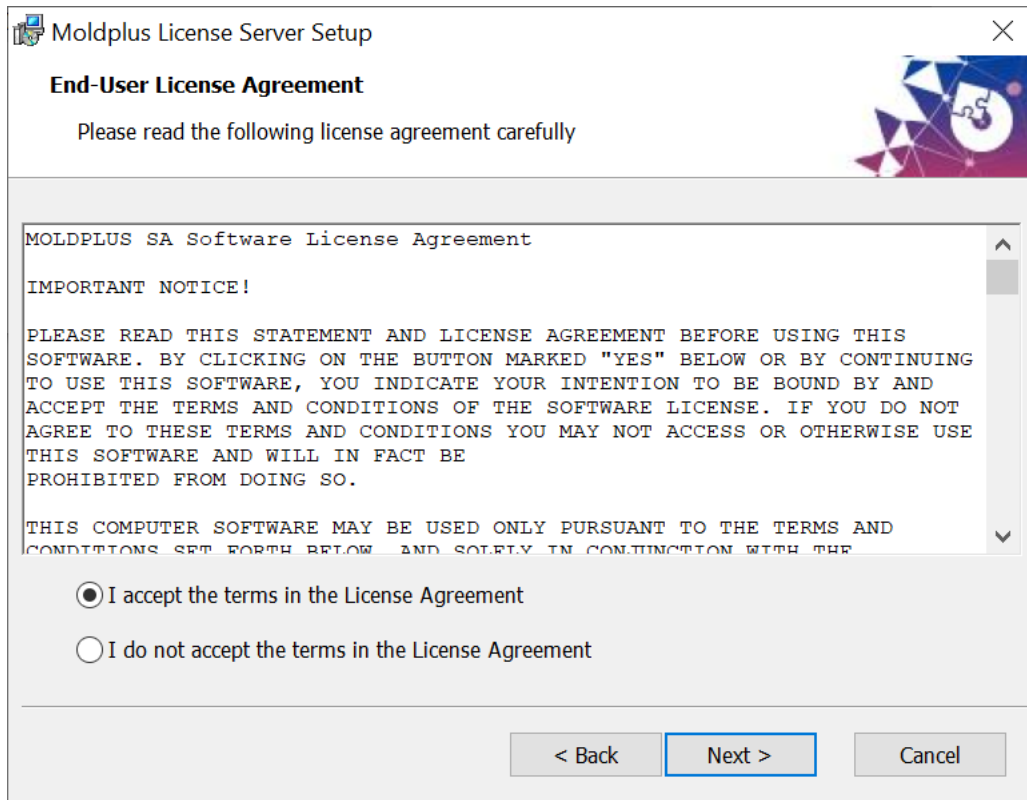


4. If the Hasp License Manager installation was found, the directory automatically defaults to **\Program Files (x86)\Aladdin\HASP LM\** folder. A new sub-folder **\Moldplus Server\** will be created under the **\HASP LM\** folder to install the Moldplus Server program files. Another folder called **\Additional Files\** will also be created under the **\HASP LM\** folder to install other relevant files. The following dialog will be presented at this stage.

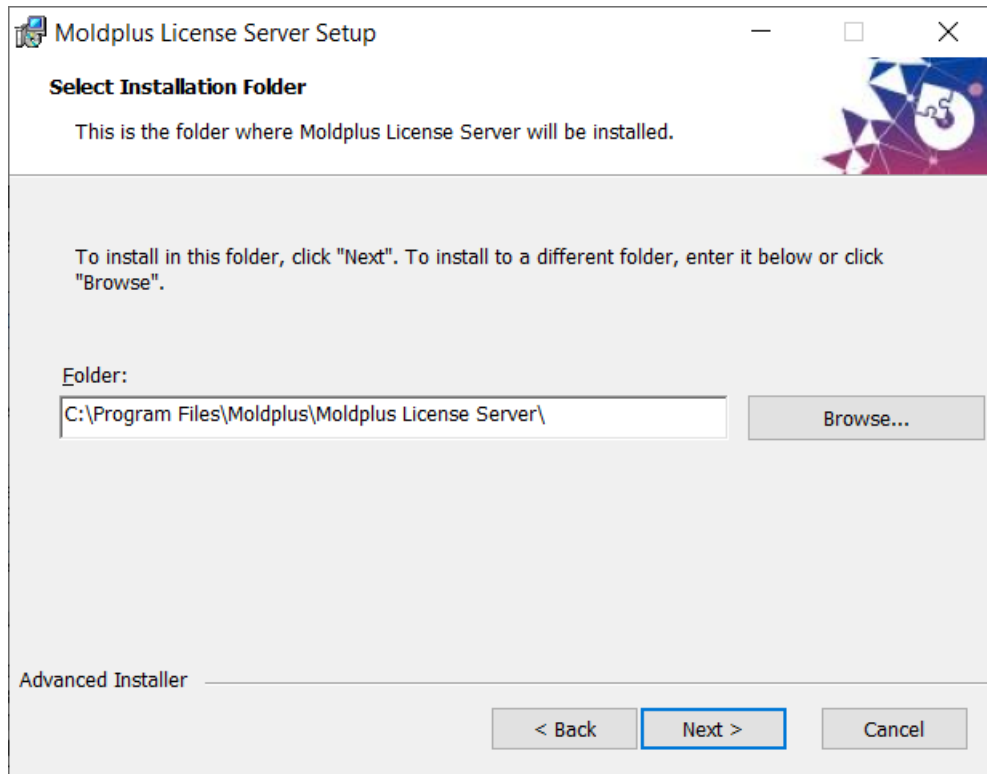

5. The files are copied to the respective folders.

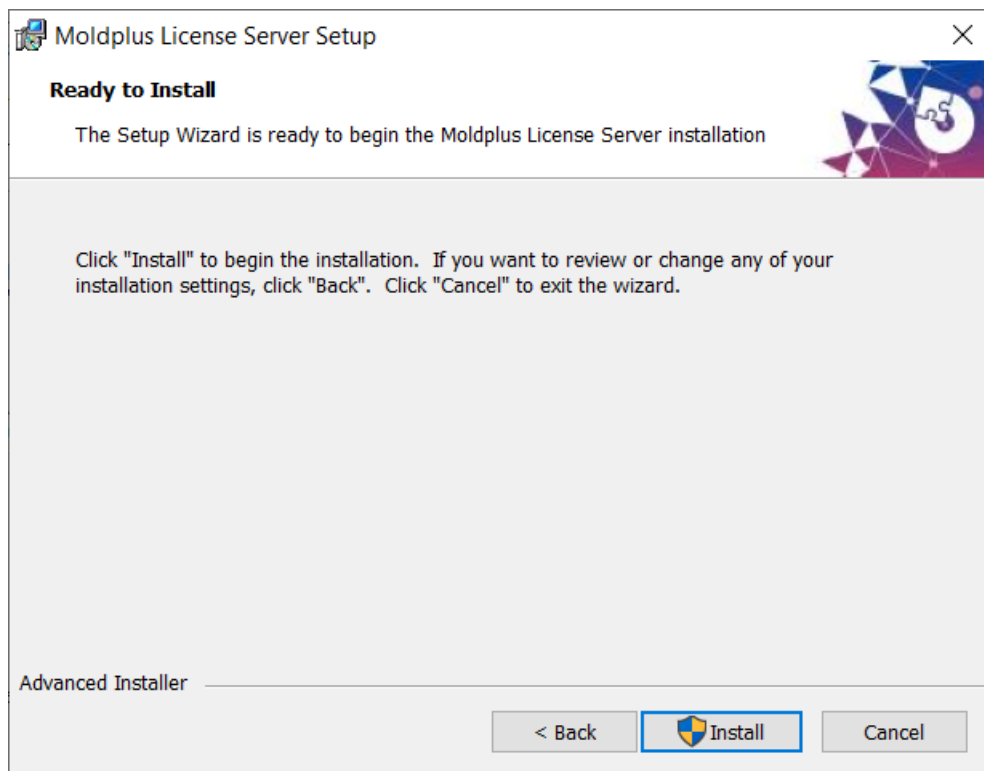

Once the files are copied successfully, you will get an install complete successfully message.

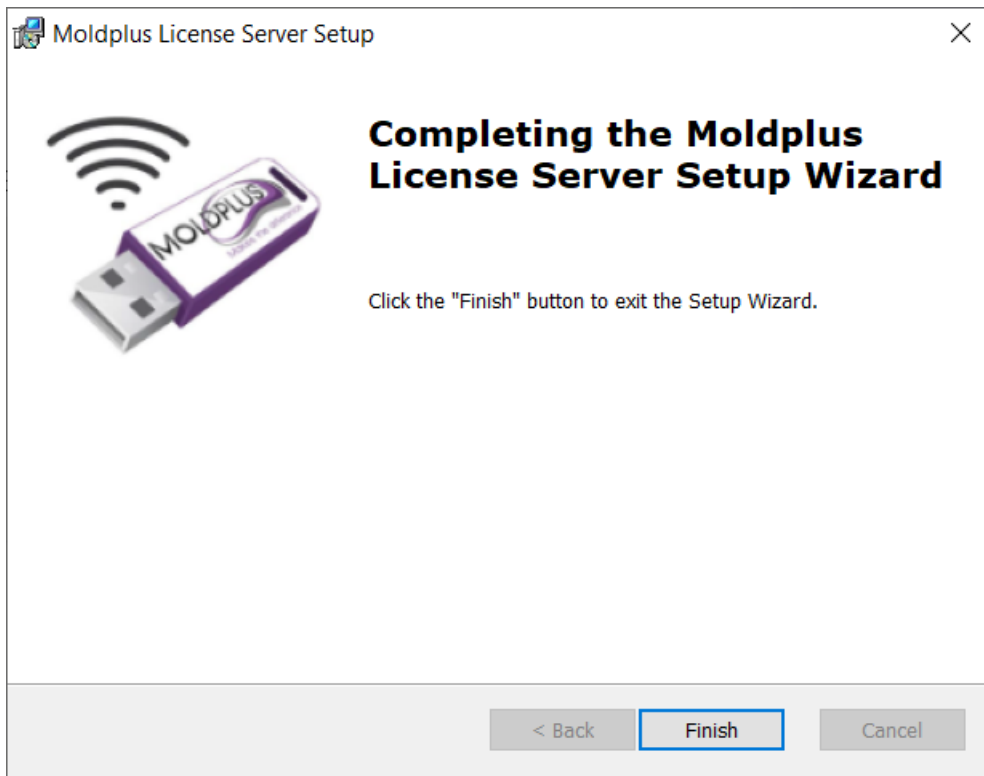

## Folder Locations

The **Moldplus Server product** is installed to the following location:

C:\Program Files\Moldplus\Moldplus License Server

Name	Date modified	Type	Size
imageformats	3/24/2019 3:04 PM	File folder	
platforms	3/24/2019 3:04 PM	File folder	
ThirdPartySoftware	3/24/2019 3:04 PM	File folder	
moldservd.dll	3/13/2019 4:12 PM	Application extens...	896 KB
MoldservDiagTool.exe	3/13/2019 4:13 PM	Application	205 KB
MoldservManager.exe	3/13/2019 4:13 PM	Application	371 KB
MoldservService.exe	3/13/2019 4:14 PM	Application	224 KB
Qt5Core.dll	2/9/2018 7:02 PM	Application extens...	5,716 KB
Qt5Gui.dll	2/9/2018 7:02 PM	Application extens...	6,128 KB
Qt5Network.dll	2/9/2018 7:02 PM	Application extens...	1,202 KB
Qt5Svg.dll	2/9/2018 7:02 PM	Application extens...	321 KB
Qt5Widgets.dll	2/9/2018 7:02 PM	Application extens...	5,340 KB

The **Additional Files** is installed to the following location:

C:\Program Files\Moldplus\Moldplus License Server\ThirdPartySoftware

Name	Date modified	Type	Size
HASPUserSetup.exe	3/13/2019 4:14 PM	Application	19,354 KB
Imsetup.exe	3/13/2019 4:14 PM	Application	16,357 KB

After launching the Moldplus Server and registering the license, the files are stored to the following location:

C:\Users\Public\Documents\Moldplus\Moldserv


Name	Date modified	Type	Size
licensesBackup	3/10/2019 4:34 PM	File folder	
M-ABC_Client_M219-1234_s.xml	3/10/2019 3:48 PM	XML Document	13 KB
ManagerLog.txt	3/24/2019 3:02 PM	Text Document	4 KB
moldserv.ini	3/24/2019 3:01 PM	Configuration setti...	1 KB


## After installation

Once the installation is completed successfully, you can perform the following operations to ensure that Moldplus Server 6.0 is up and running.

You can continue with the following steps when the Moldplus Server successfully launches after these steps.

### **Moldplus Server Configuration – NETHASP SIM**


1. Launch the Moldplus Server Manager  from the Program Groups “Moldplus License Server”. If this is a configuration for the first time, you will see the following dialog.

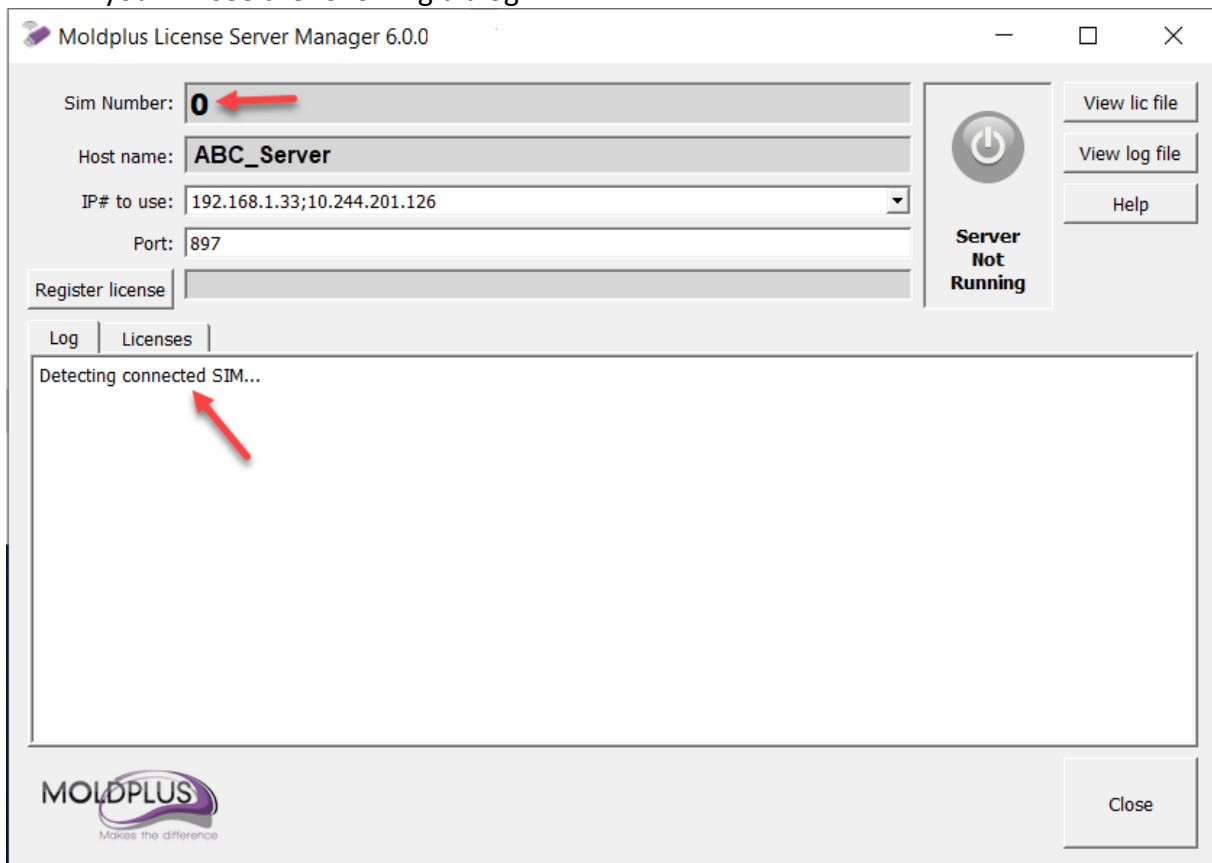


This process may take a little time. Do NOT DO ANYTHING till the NEXT PROMPT in the log file.

Whatever IP addresses exist on the server are chosen automatically in the IP# to use section.

- When the NETHASP SIM is identified, the following prompt to disconnect the NETHASP SIM is mentioned in the Log section. Sometimes the SIM number might not be identified yet and might display a 0 value. It is OK.

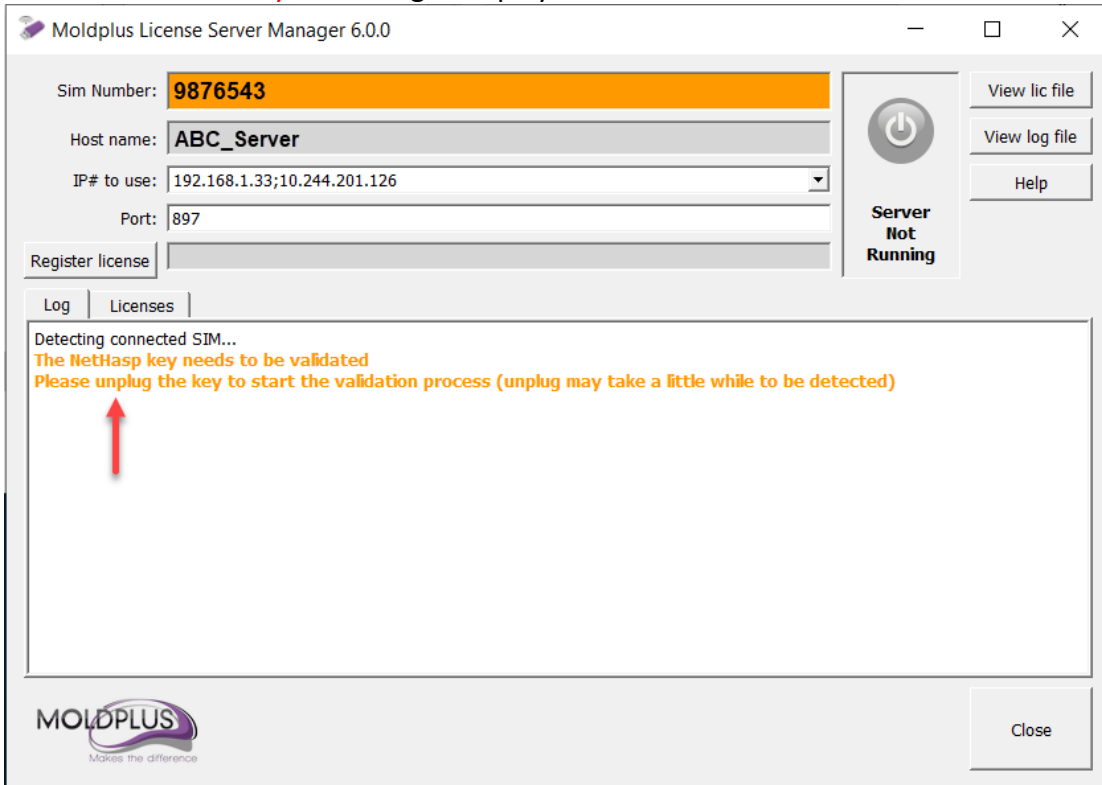

- Disconnect the NETHASP SIM from the Server computer. DO NOT RECONNECT IT TILL PROMPTED! The SIM number will display a value of 0. This is correct. Please wait! You will be prompted as shown below to reconnect the NETHASP SIM.

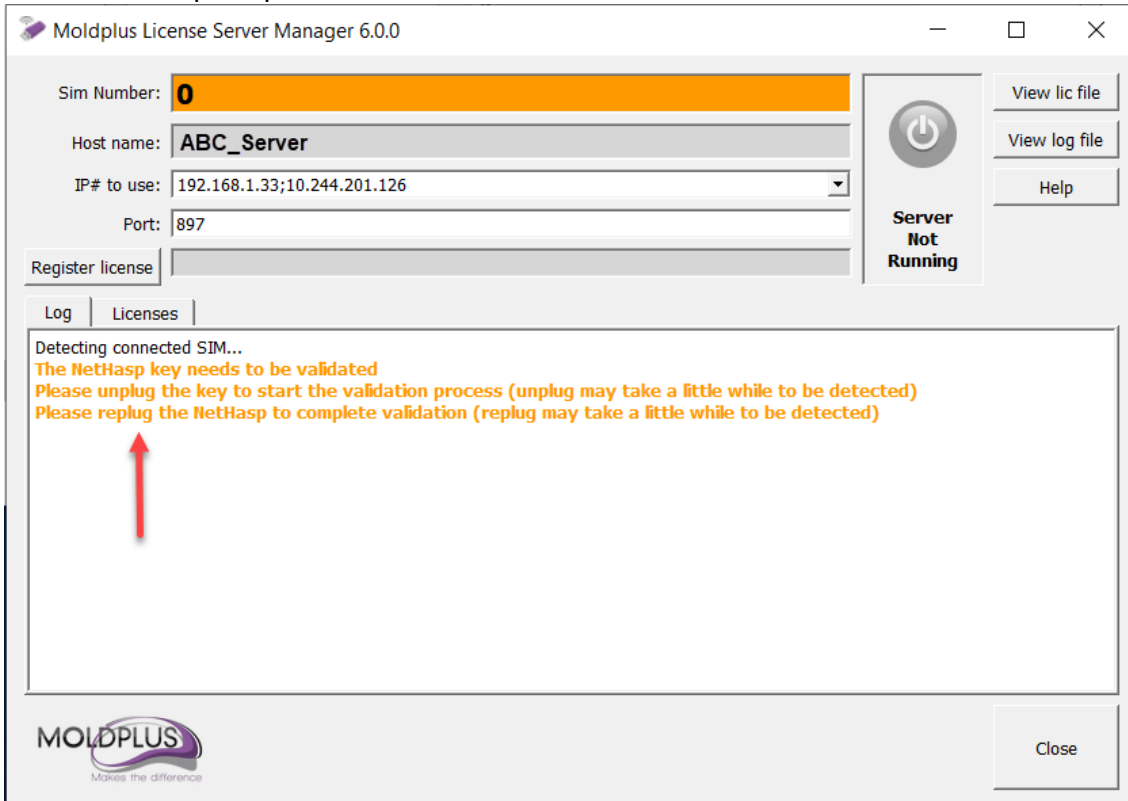


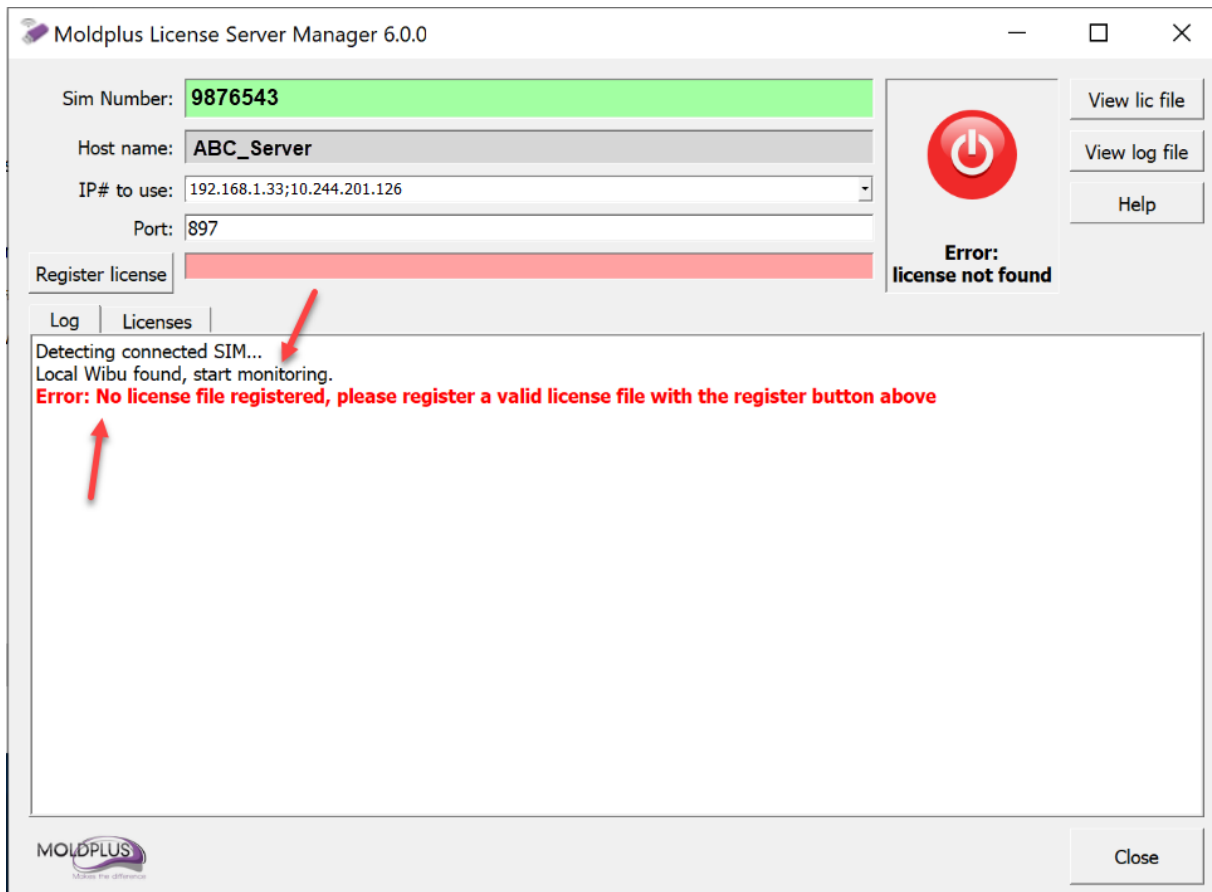


4. When you reconnect the NETHASP SIM again, the SIM is now identified and displayed as shown:


The screenshot displays the 'Moldplus License Server Manager 6.0.0' window. The 'Sim Number' field is highlighted in green and contains the value '9876543', with a red arrow pointing to it. Other fields include 'Host name: ABC\_Server', 'IP# to use: 192.168.1.33;10.244.201.126', and 'Port: 897'. A 'Register license' button is visible. On the right, a power button icon is present, and the status is 'Server Not Running'. Below the input fields, there are buttons for 'View lic file', 'View log file', and 'Help'. The main log area shows the following text: 'Detecting connected SIM...', 'The NetHasp key needs to be validated', 'Please unplug the key to start the validation process (unplug may take a little while to be detected)', 'Please replug the NetHasp to complete validation (replug may take a little while to be detected)', 'NetHasp 9876543 successfully validated', 'Local NetHasp found, start monitoring.', and 'Error: No license file registered, please register a valid license file with the register button above'. A red arrow points to the error message. The 'MOLDPLUS' logo is in the bottom left, and a 'Close' button is in the bottom right.

## Moldplus Server Configuration – WIBU NETWORK SIM

5. Launch the Moldplus Server Manager  from the Program Groups “Moldplus License Server”. If the WIBU SIM is identified, it is immediately displayed here.




WARNING: The Moldplus Server will only function on a local WIBU Server. If you attempt to configure the Moldplus Server and the Local WIBU Server is NOT identified, you will not be able to configure the Server.

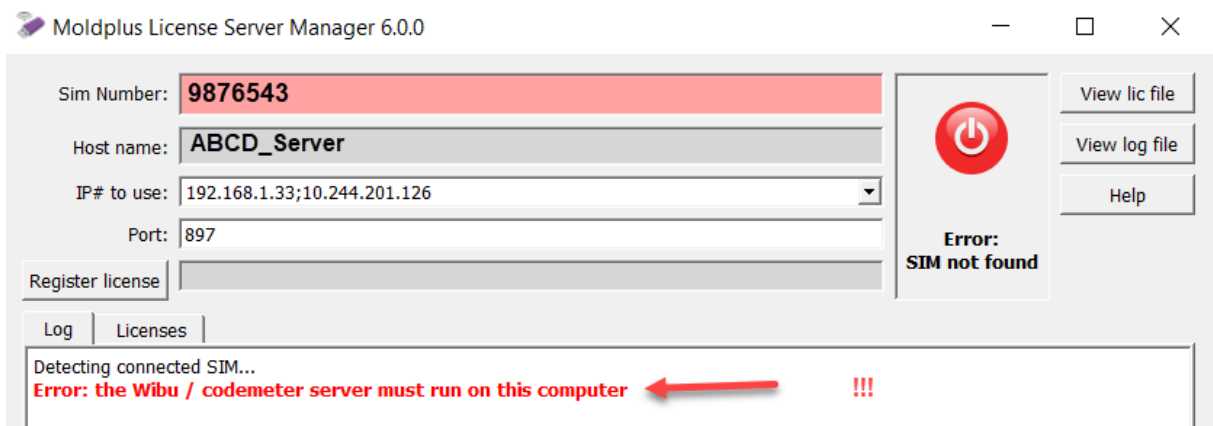


You are now ready to register the XML license.

### XML License Registration Process:


- To register the provided XML license file, **click** on the **Register license** button to select the license file from the location it is stored at.

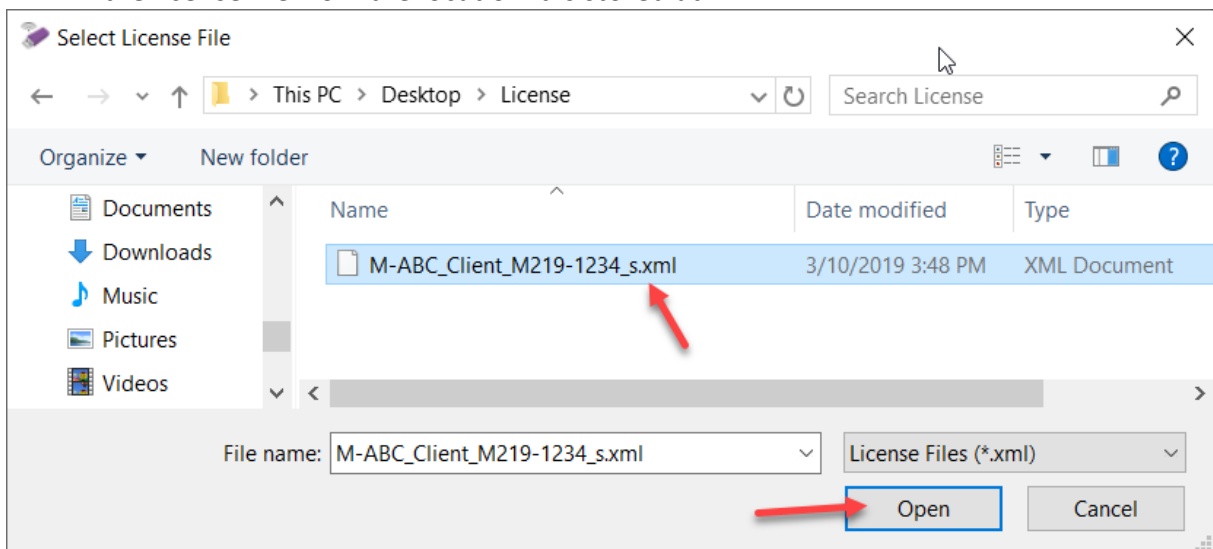

The result of doing this with the XML license will be as follows. The license is successfully registered.

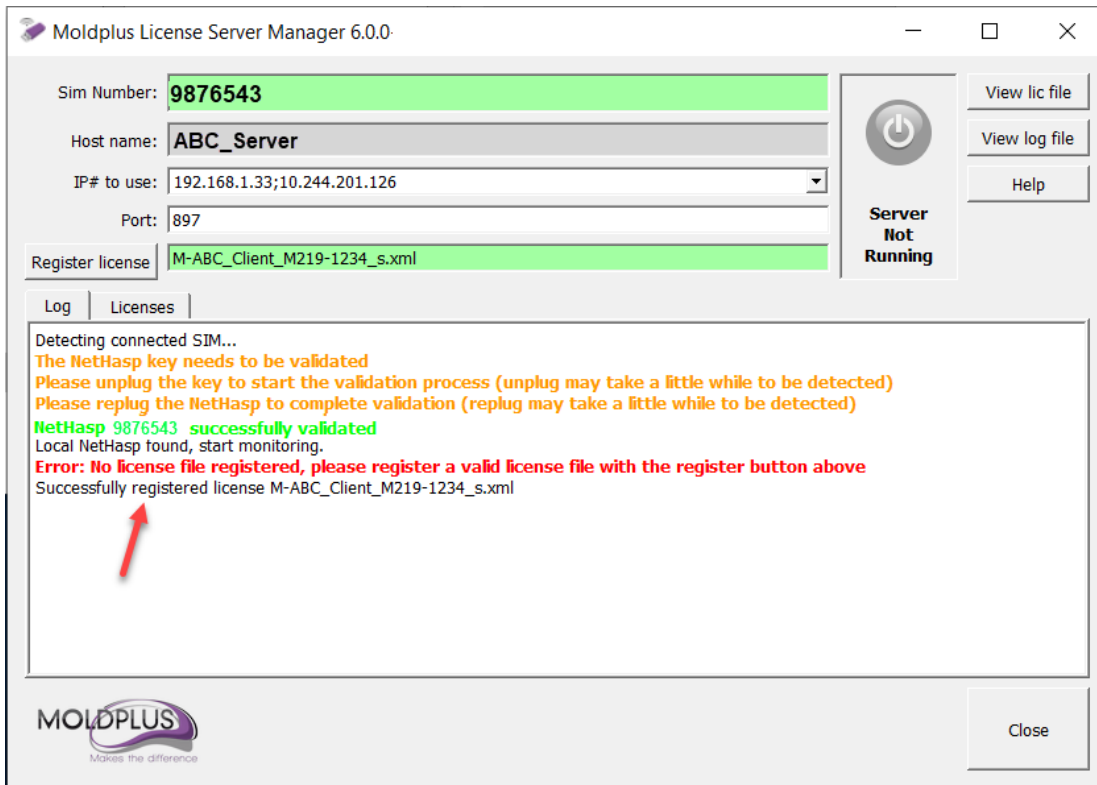

7. The License Server is automatically launched.

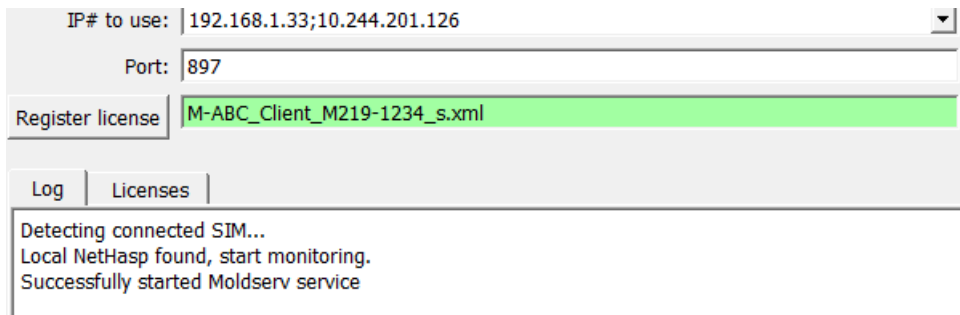

8. The following is the result when the License Server is running.

Moldplus License Server Manager 6.0.0

Sim Number: **9876543**

Host name: **ABC\_Server**

IP# to use: 192.168.1.33

Port: 897

Register license: **M-ABC\_Client\_M219-1234\_s.xml**

**Server Running**

View lic file

View log file

Help


Log Licenses

	Level Id	Level Name	Date	Type	#Used Seats	#Seats
1	1	Moldplus Standard	Fri Jan 31 2020	M	0	10
2	3	Moldplus Professional	Fri Jan 31 2020	M	0	10
3	5	Moldplus 5 Axis Toolkit	Fri Jan 31 2020	M	0	10
4	6	Moldplus 5 Axis Toolkit Professional	Fri Jan 31 2020	M	0	10
5	7	Moldplus STL Utilities	Fri Jan 31 2020	M	0	10
6	8	Moldplus Plate Fixture Design	Fri Jan 31 2020	M	0	10
7	11	Moldplus CATIA V5 Read	Fri Jan 31 2020	M	0	10


MOLDPLUS  
Makes the difference

Close

If it does not launch right away, wait a bit. If it still does not launch, you can close the dialog and launch the Server Manager using the Admin mode.

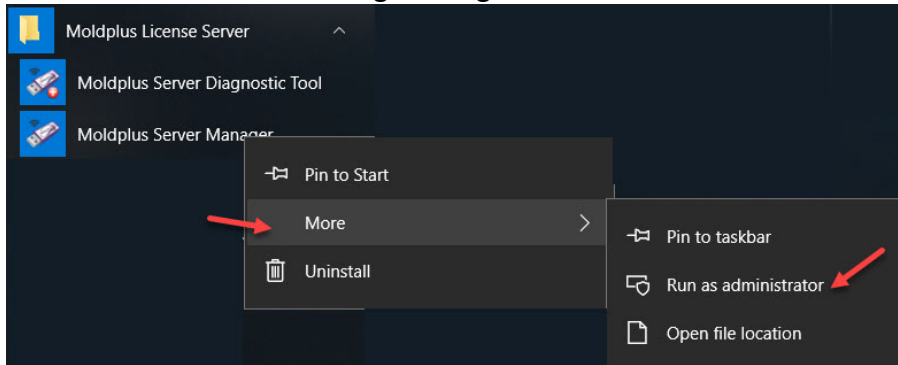


Once launched, you can click on the **Start server** to launch the Server.

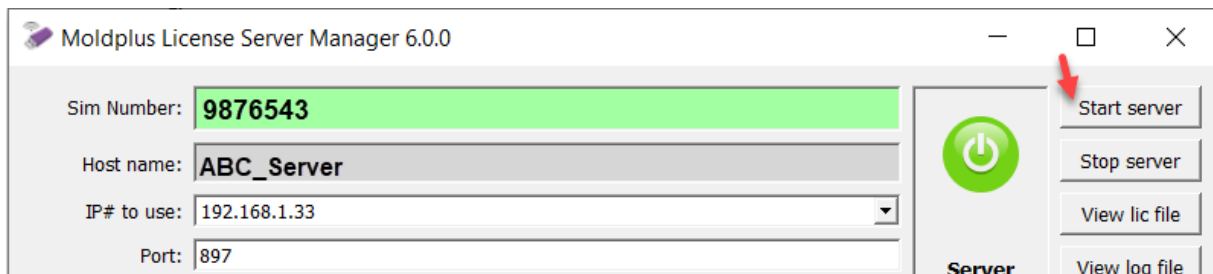

## Update XML License process

When maintenance is renewed, and you are provided a new license from your reseller, the installation process is simple.


1. Have the new XML license file handy on the Server computer.
2. Launch the Moldplus Server Manager if it is not running.
3. Click on the **Register license**.

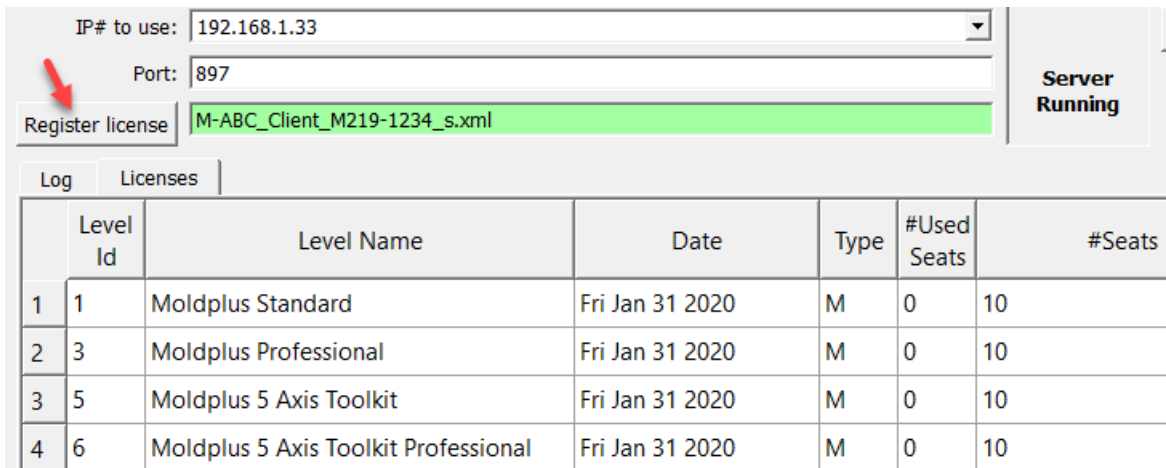

The screenshot shows the Moldplus Server Manager interface. At the top, there is a section for 'IP# to use' (192.168.1.33) and 'Port' (897). A red arrow points to the 'Register license' button. Below this, a license file 'M-ABC\_Client\_M219-1234\_s.xml' is highlighted in green. To the right, a 'Server Running' indicator is visible. Below the license selection, there are tabs for 'Log' and 'Licenses'. The 'Licenses' tab is active, displaying a table with the following data:

	Level Id	Level Name	Date	Type	#Used Seats	#Seats
1	1	Moldplus Standard	Fri Jan 31 2020	M	0	10
2	3	Moldplus Professional	Fri Jan 31 2020	M	0	10
3	5	Moldplus 5 Axis Toolkit	Fri Jan 31 2020	M	0	10
4	6	Moldplus 5 Axis Toolkit Professional	Fri Jan 31 2020	M	0	10

4. Locate the new XML license file.

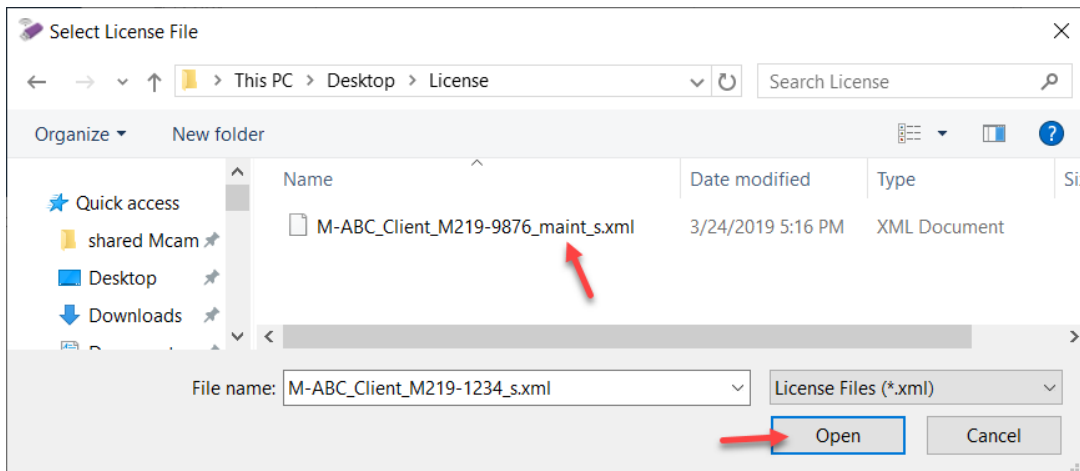

The screenshot shows a Windows File Explorer window titled 'Select License File'. The address bar shows the path 'This PC > Desktop > License'. The file list contains one file: 'M-ABC\_Client\_M219-9876\_maint\_s.xml' with a date modified of '3/24/2019 5:16 PM' and a type of 'XML Document'. A red arrow points to this file. Below the file list, the 'File name' field contains 'M-ABC\_Client\_M219-1234\_s.xml' and the file type is set to 'License Files (\*.xml)'. A red arrow points to the 'Open' button.

5. As soon as you click on **Open**, the following happens:
  - a. The new license is registered, and the license server updated. You will see the maintenance date change and the new license name mentioned in the **Register license** field.

**OLD**

IP# to use: 192.168.1.33  
 Port: 897  
 Register license: M-ABC\_Client\_M219-1234\_s.xml  
 Server Running

	Level Id	Level Name	Date	Type	#Used Seats	#Seats
1	1	Moldplus Standard	Fri Jan 31 2020	M	0	10
2	3	Moldplus Professional	Fri Jan 31 2020	M	0	10
3	5	Moldplus 5 Axis Toolkit	Fri Jan 31 2020	M	0	10
4	6	Moldplus 5 Axis Toolkit Professional	Fri Jan 31 2020	M	0	10

**NEW: The new XML license file name is displayed and the maintenance date changed to the new product maintenance date.**

IP# to use: 192.168.1.33  
 Port: 897  
 Register license: M-ABC\_Client\_M219-9876\_maint\_s.xml  
 Server Running

	Level Id	Level Name	Date	Type	#Used Seats	#Seats
1	1	Moldplus Standard	Sun Jan 31 2021	M	0	10
2	3	Moldplus Professional	Sun Jan 31 2021	M	0	10
3	5	Moldplus 5 Axis Toolkit	Sun Jan 31 2021	M	0	10
4	6	Moldplus 5 Axis Toolkit Professional	Sun Jan 31 2021	M	0	10
5	7	Moldplus STL Utilities	Sun Jan 31 2021	M	0	10

- b. The old XML license is backed up to the **licensesBackup** folder.
- c.

Organize    New    Open    Select

> Local Disk (C:) > Users > Public > Public Documents > Moldplus > Moldserv > licensesBackup


Name	Date modified	Type
M-ABC_Client_M219-1234_s.xml	3/10/2019 3:48 PM	XML Document

6. The Moldplus Server is up and running. This process can be done remotely without a physical presence at the Server




## Uninstallation


To uninstall Moldplus Server, launch the Moldplus Server installation program from the Control Panel, “Add or Remove Programs”. If it detects that an installed version exists on the system, it will provide the option to perform an uninstall.

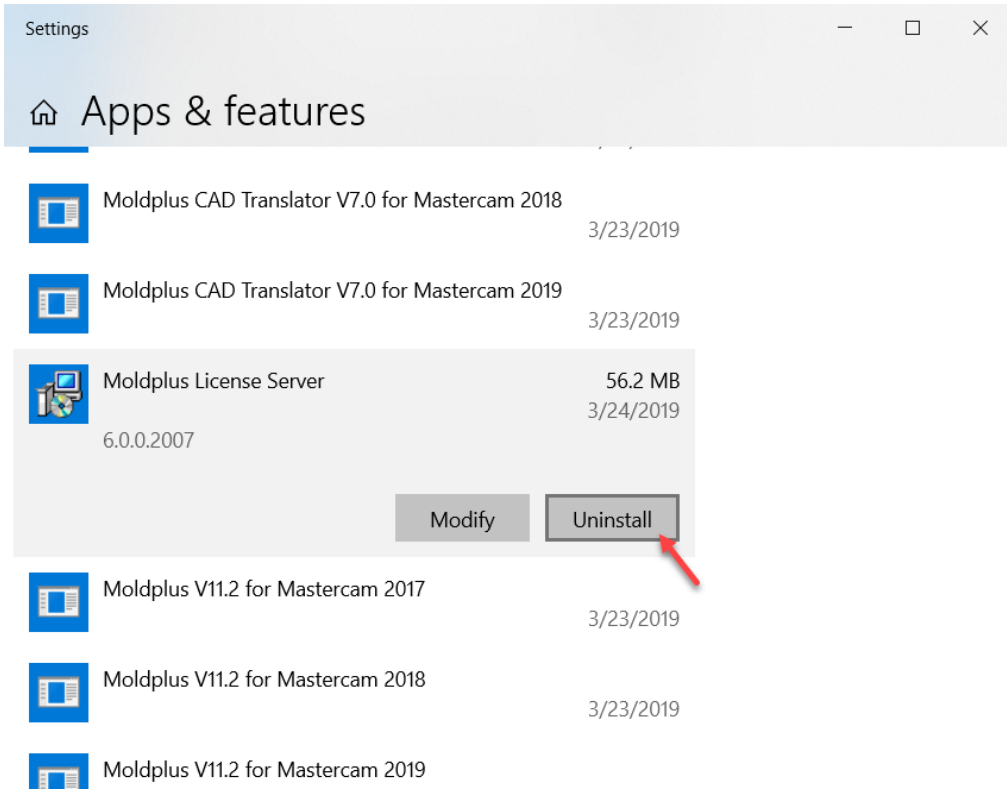


**Warning:** If the Moldplus Server Manager is still active, upon launching the installation program the following message will be presented:

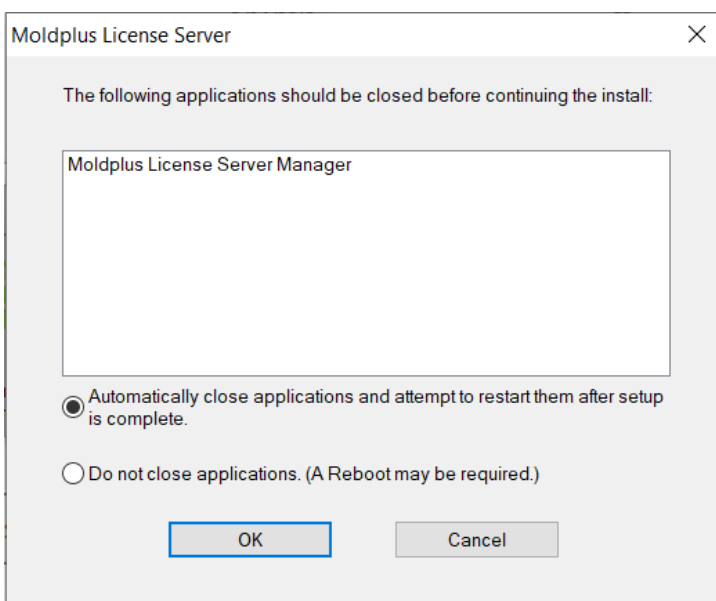

Close

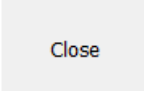In the case of the above message, click on the  button from Moldplus Server Manager to close the dialog OR choose the default option above to close it automatically and continue with the uninstallation process.

If Moldplus Service and Server were stopped, the following message is displayed upon launching the installation program.

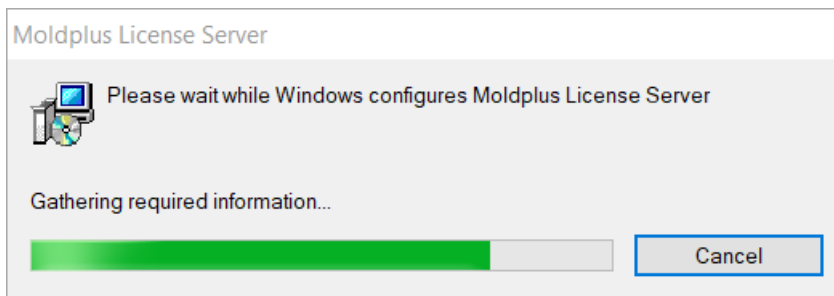

The uninstallation process is complete.

**NOTE:** The XML license file, the LOG file and the INI files will not be removed upon uninstalling the product. They will still reside in the `\Public Documents\Moldplus\Moldserv\` folder.

## Client Computer License configuration

The latest versions of Moldplus and CATIA Translator will automatically detect the Moldplus Server and configure the IP and Port number.

Once the data is stored in the **C:\moldserv\moldserv.dat file**, you will be able to use Moldplus and the CATIA translator to the maximum licenses allowed.

**NOTE:** If this file does not exist on the system, create the c:\moldserv\ folder and then create the moldserv.dat file within that folder. That will ensure that the Moldplus Server is identified.

This is an example of the licenses encountered for the Moldplus product that can be checked out.

Moldplus License

Copyright © 1997-2020 Moldplus S.A. Sim number: 123456789  
Moldplus 11.4.3 (11.4) for M2020 Sim type: WIBU NETWORK  
Third-party Licenses User type: Industry

Licenses Functions

License	Maint. ...	Day L...	Seat ...	State
1: Moldplus Standard	1/31/2...	-	0/10	Ok
3: Moldplus Profession...	1/31/2...	-	0/10	Ok
5: Moldplus 5 Axis Too...	1/31/2...	-	0/10	Ok
6: Moldplus 5 Axis Too...	1/31/2...	-	0/10	Ok
7: Moldplus STL Utilities	1/31/2...	-	0/10	Ok
8: Moldplus Plate Fixtu...	1/31/2...	-	0/10	Ok

Local XML license file (License codes for the NETWORK license need to be registered with the Moldplus Server)

Status:  Register

File:

Server configuration

Status: Connected to Moldplus Server. Refresh

Host Name: ABC Server

Host IP: 192.111.222.223 Set Server Parameters

Host Port: 897

Close Help

The Moldplus CAD Translator will show the corresponding licensed products.

Moldplus License Manager ✕

Copyright © 1997-2019 Moldplus S.A.

7.0.0

Sim number

Sim type

User type

Licenses

License	Maint. Date	Day Left	Seat used	State
11: Moldplus CATIA V5 Read	1/31/2020	-	0/10	✔ Ok
12: Moldplus CATIA V5 Read Solids	1/31/2020	-	0/10	✔ Ok
13: Moldplus CATIA V4 Read	1/31/2020	-	0/10	✔ Ok
14: Moldplus CATIA V4 Write	1/31/2020	-	0/10	✔ Ok
15: Moldplus CATIA V4 Solids	1/31/2020	-	0/10	✔ Ok
16: Moldplus CATIA V5/V6 MBD	1/31/2020	-	0/10	✔ Ok
17: Moldplus CATIA V5 CGR Import	1/31/2020	-	0/10	✔ Ok
18: Moldplus CATIA V6 Import	1/31/2020	-	0/10	✔ Ok
24: Moldplus NX/UG Import with M...	1/31/2020	-	0/10	✔ Ok
25: Moldplus JT Import	1/31/2020	-	0/10	✔ Ok
28: Moldplus ProE/Croce Import wit...	1/31/2020	-	0/10	✔ Ok
29: Moldplus Step Read	-	-	-	✘ No License

Local XML license file (Only demo codes allowed in NetHasp)

Status

File

Server configuration

Status

Host Name

Host IP


Host Port

# Network License Monitor

The following information will be presented only when you launch from the Programs folder.

The following details will explain all the options of the Moldplus Server 6.0 dialog.

## 1.1 Moldplus License Server Manager

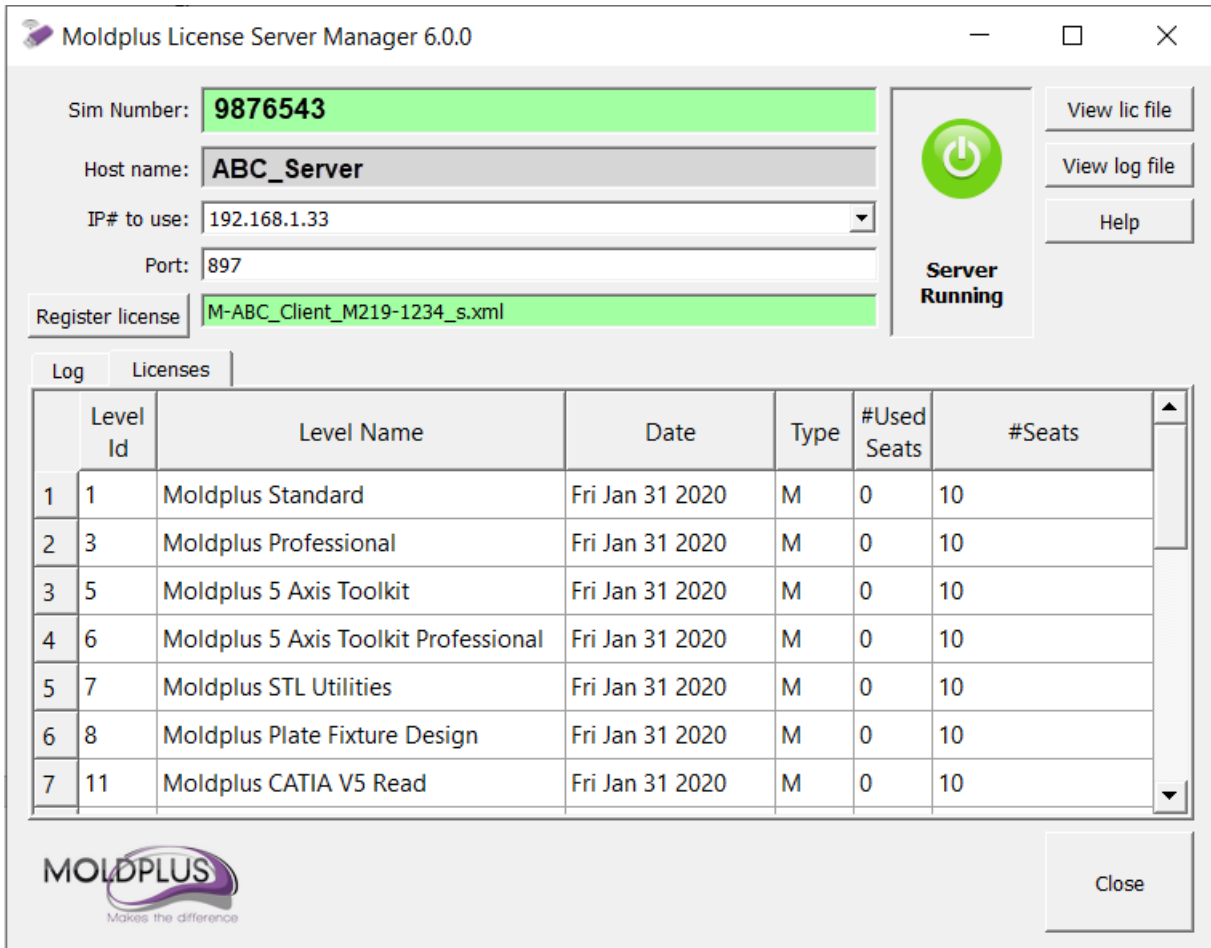

### Serial Number:


The Mastercam Nethasp SIM number OR WIBU NETWORK SIM number is displayed as the Serial Number. If a serial number of 0 is displayed, refer to the [SIM not found section](#) of this document to ensure that Moldplus Server can access the Mastercam SIM.

### Host Name:

The system network server name is displayed here. The end user can use this name as the reference to search for the Server using the work stations. As default, server name alone is sufficient to configure the workstations with all new versions of Moldplus products.

**IP# to use:**

The Moldplus Server functions properly by using one or multiple **IP address** (pre-assigned or user-configured). *If there is more than 1 IP address on the system, you will be allowed to check the relevant IP addresses to use with Moldplus Server.* The IP address is the same as the one used by the Hasp License Manager. The IP addresses that are checked are displayed in the field.

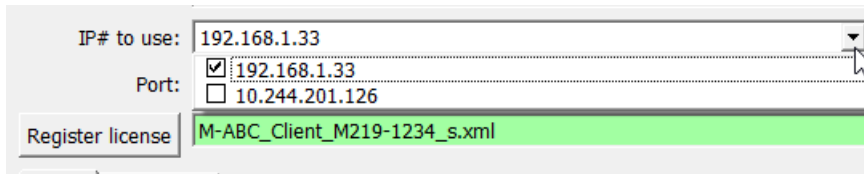

**Hint:** Multiple IP Addresses are useful when you use an IP address to access the Server from the office and a different IP address from a remote location. By having both IP addresses checked, you can access the Server from either location.

**Port:**

The communication of the license is affected by the UDP ports, which are defined by default for each machine (server: 897). You can modify the UDP ports if there are conflicts with another application.

**Register license**

Allows you to select the Moldplus Server XML license file to register the licenses. **You have to use this button to properly register the XML license file.** This file is provided by your Mastercam reseller to configure all your Moldplus product licenses.


**Note:** Updating to a new license will automatically backup the old license and register the new license. No need to stop the Server to do this!

**WARNING:**

- 1. Editing any of the XML file's contents OR changing the file name prefix from "M-" will result in an invalid license file!**

**Log Display:**

Displays the Server event log. This file (ManagerLog.txt) is stored in the same folder as the license file.

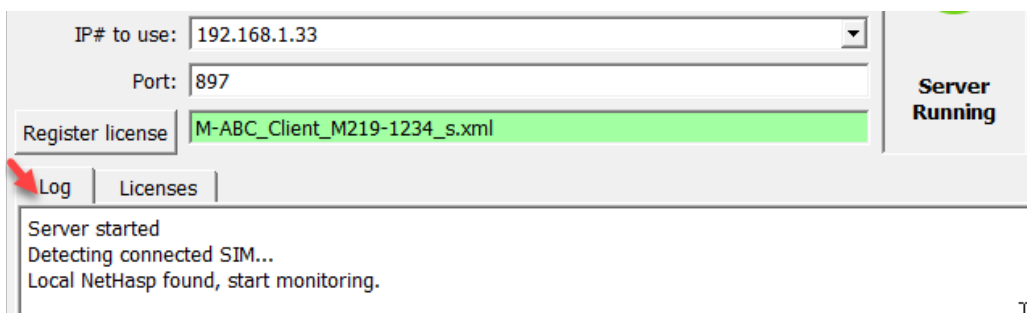

## Licenses Display:

The licenses tab displays the following information whenever the Server is running and active.

Moldplus License Server Manager 6.0.0

Sim Number: **9876543**

Host name: **ABC\_Server**

IP# to use: 192.168.1.33

Port: 897

Register license: **M-ABC\_Client\_M219-1234\_s.xml**

Server Running

View lic file

View log file

Help

Log Licenses

	Level Id	Level Name	Date	Type	#Used Seats	#Seats
1	1	Moldplus Standard	Fri Jan 31 2020	M	0	10
2	3	Moldplus Professional	Fri Jan 31 2020	M	0	10
3	5	Moldplus 5 Axis Toolkit	Fri Jan 31 2020	M	0	10
4	6	Moldplus 5 Axis Toolkit Professional	Fri Jan 31 2020	M	0	10
5	7	Moldplus STL Utilities	Fri Jan 31 2020	M	0	10
6	8	Moldplus Plate Fixture Design	Fri Jan 31 2020	M	0	10
7	11	Moldplus CATIA V5 Read	Fri Jan 31 2020	M	0	10

MOLDPLUS  
Makes the difference

Close

### Number Count

A number count of the different Moldplus products licensed.

### Level Id

Level Id

Moldplus product reference ID number.

### Level Name

Level Name

The name of any Moldplus product that is licensed and controlled using the Moldplus Server.

**Date** Date

This date indicates the maintenance expiration date for any given Moldplus product. **As long as the maintenance date has not expired, the client can always use the latest releases and versions provided by Moldplus SA.** If the date has expired, only functionality prior to the Maintenance expiry date will be active within a 12 month period. Moldplus temporary licenses are also displayed in the same field.

**Type** Type

Type of code, either **Maintenance**, **Temporary** or **Educational**.

**#Used Seats** #Used Seats

The number of licenses of the listed products that are **actively** being used by a client at any given time over the network.

**#Seats** #Seats

The total number of **registered** licenses purchased by the client for the listed product.

**Start server** **(ONLY AVAILABLE WHEN LAUNCHED WITH ADMIN RIGHTS)**

This button installs the Moldplus Service and launches the Moldplus Server licenses for immediate use of the product.

**Stop server** **(ONLY AVAILABLE WHEN LAUNCHED WITH ADMIN RIGHTS)**

This button will stop the Moldplus Server AND remove the Moldplus Windows Service.

**View lic file**

This button allows you to view the provided XML license using the default Internet browser.

**View log file**

View the Log history for the Moldplus Server using Windows notepad.

**Help**

Open this PDF help document.

**Close**

This button will close the Moldplus Server Manager dialog. **Closing this dialog will not stop the licenses from running if they are active.**



## 1.2 Moldplus Licenses Operation

Each time a Moldplus license is open on one machine it is counted as a floating license being used.

Upon correctly leaving a Moldplus Level, a license for this level is immediately and automatically released.

Normally, when the number of Moldplus users arrives at the maximum number permitted by the license all new requests to use Moldplus will be refused until one person stops using Moldplus.

**If the user is required to leave Moldplus due to a fatal error the license will be released after a minimum of 30 seconds.**

## 1.3 Moldplus Temporary Licenses

Temporary licenses to try Moldplus products are normally provided for a period of 30 days.

## Trouble-shooting

The following section refers to the installation issues and how to verify the proper settings and configuration.

For Windows Server editions, please check the [configuration](#) section above.


**The basic checks are: Firewall settings and Antivirus software to ensure that the Moldplus Server properly launches.**

### 2.1 *NetHasp License Manager not installed*

#### **Solution:**

Run the LMSETUP.EXE file, found in the `\Program Files\Moldplus\Moldplus License Server\ThirdPartySoftware\` folder. This will launch the NetHasp License Manager installation, install the necessary files and configure the NetHasp License Manager to run on your system.

To set it as a **Service**, ensure that you select the following option while performing this installation:

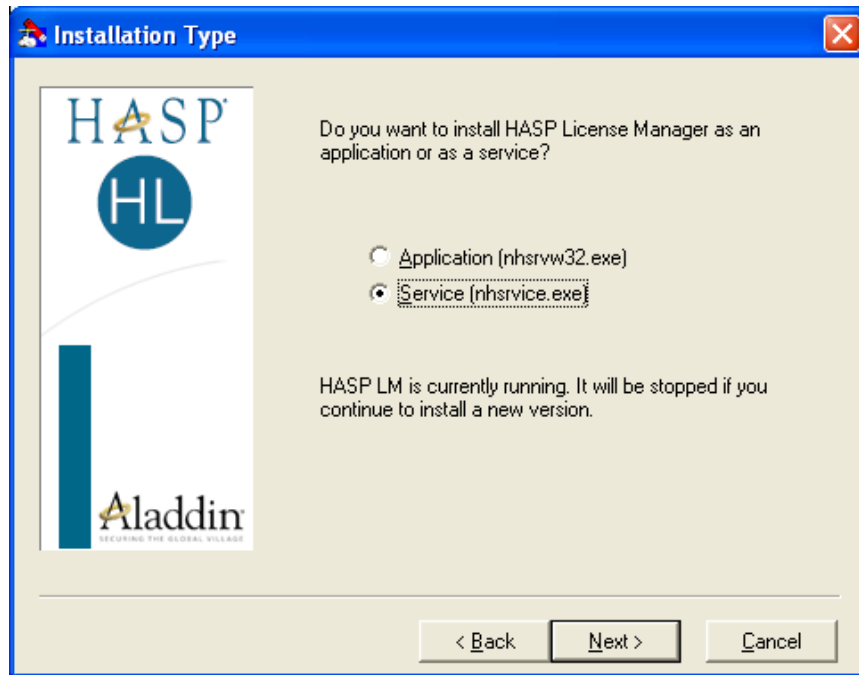


This is critical to launch the Moldplus Server. If this is not running on your system, Moldplus Server will give errors.


### 2.3.3 Moldplus Server Diagnostic Tool

In the Moldplus Server Manager folder, there is a diagnostic tool that can be copied and placed in the workstation to see if the Server is being properly accessed.

Copy the following files to the client workstation:

1. **MoldservDiagTool.exe**
2. **Qt5Core.dll**
3. **Qt5Gui.dll** and
4. **Qt5Network.dll**

Launch the  **Moldplus Server Diagnostic Tool** utility from the “Moldplus License Server” group. The following dialog is presented. Click on the **Auto Detect Server Settings** button. The utility will search for the Server.

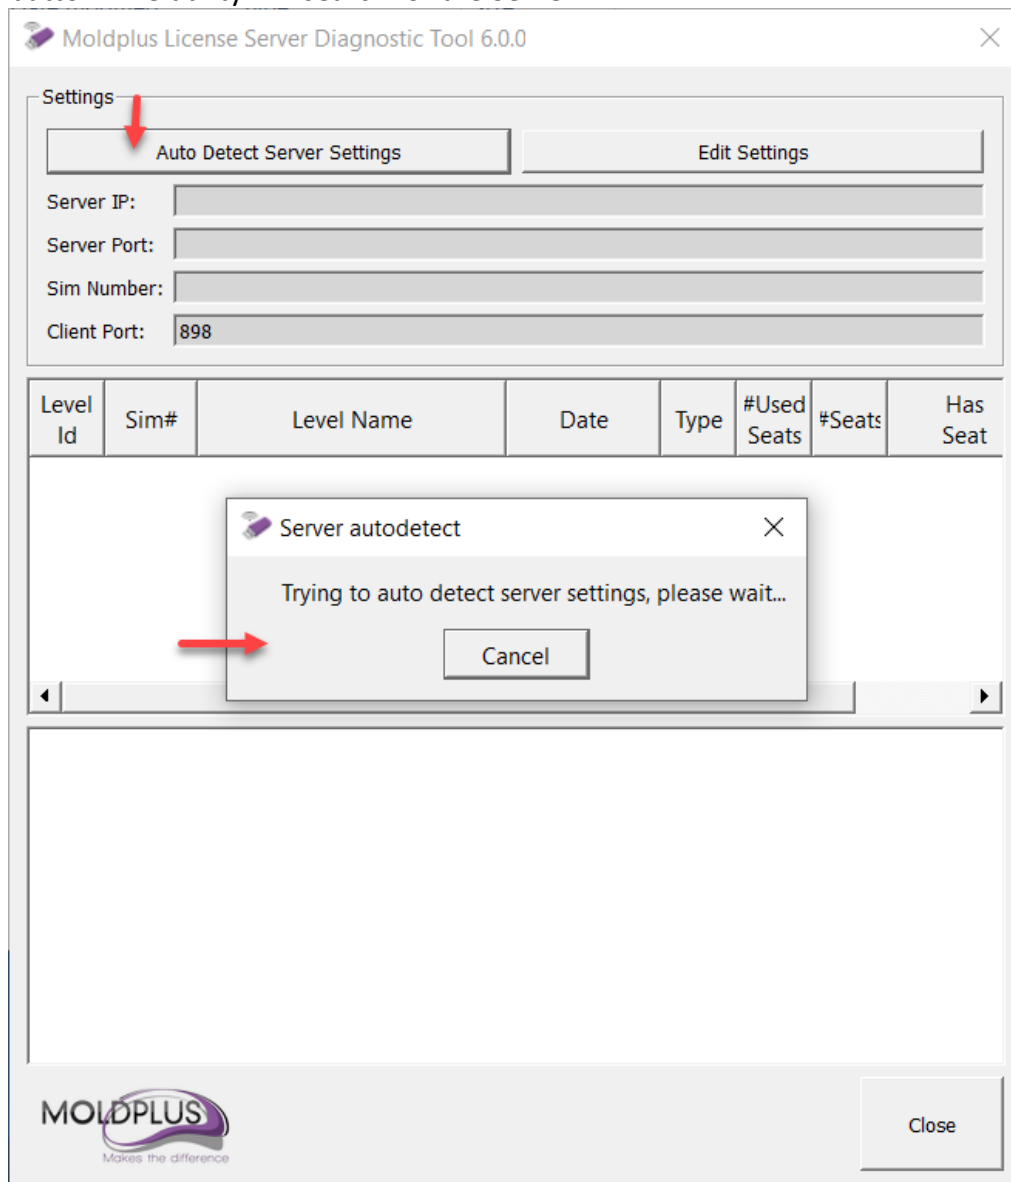

When the Server is identified, all the products available are listed as shown. You can click on the **Register** button to see if the workstation can check out a license. Clicking on **Unregister** will release the license.

**Moldplus License Server Diagnostic Tool 6.0.0**

Settings

Auto Detect Server Settings      Edit Settings

Server IP: 192.168.1.33

Server Port: 897

Sim Number: 31

Client Port: 898

	Level Id	Sim#	Level Name	Date	Type	#Used Seats	#Seats
1	1	31	Moldplus Standard	Fri Jan 31 20...	M	0	10
2	3	31	Moldplus Professional	Fri Jan 31 20...	M	0	10
3	5	31	Moldplus 5 Axis Toolkit	Fri Jan 31 20...	M	0	10
4	6	31	Moldplus 5 Axis Toolkit Pro...	Fri Jan 31 20...	M	0	10
5	7	31	Moldplus STL Utilities	Fri Jan 31 20...	M	0	10
6	8	31	Moldplus Plate Fixture Desi...	Fri Jan 31 20...	M	0	10
7	11	31	Moldplus CATIA V5 Read	Fri Jan 31 20...	M	0	10


1	Register	Unregister	1	Moldplus Standard
2	Register	Unregister	3	Moldplus Professional
3	Register	Unregister	5	Moldplus 5 Axis Tool...
4	Register	Unregister	6	Moldplus 5 Axis Tool...
5	Register	Unregister	7	Moldplus STL Utilities
6	Register	Unregister	8	Moldplus Plate Fixtu...
7	Register	Unregister	11	Moldplus CATIA V5 ...
8	Register	Unregister	12	Moldplus CATIA V5 ...
9	Register	Unregister	13	Moldplus CATIA V4 ...
10	Register	Unregister	14	Moldplus CATIA V4 ...
11	Register	Unregister	15	Moldplus CATIA V4 ...

**MOLDPLUS**  
Makes the difference

Close

This is a quick verification tool to see if the Server is properly identified and the licenses can be checked out.

If the Server is not identified automatically, you can click on the **Edit Settings** button. The following dialog is presented:

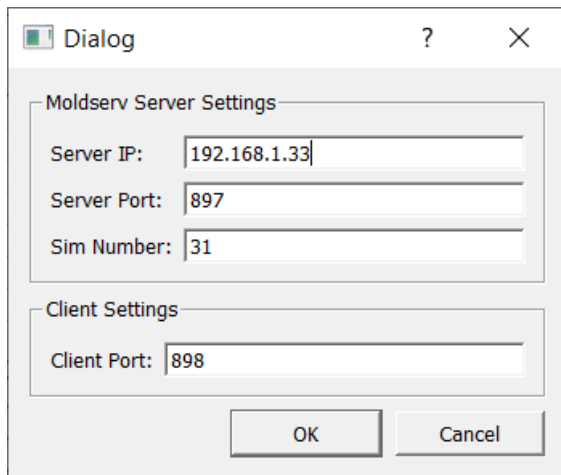

The screenshot shows a dialog box titled "Dialog" with a question mark icon and a close button. It is divided into two sections: "Moldserv Server Settings" and "Client Settings".

**Moldserv Server Settings:**

- Server IP: 192.168.1.33
- Server Port: 897
- Sim Number: 31

**Client Settings:**

- Client Port: 898

At the bottom of the dialog are two buttons: "OK" and "Cancel".

Enter the IP address here and port number if needed to search for the server. Once the Server is identified the dialog displays all the product licenses available as shown in the previous dialog.

## Conclusion

We hope you found this document useful to help configure Moldplus Server 6.0 seamlessly and with minimal effort.

Questions or feedback, please email [support@moldplus.com](mailto:support@moldplus.com)

Moldplus Server is developed with open source software. Licenses for all open source software components are available in the file "*Open Source Software Licenses.docx*" which is provided with this installation.

Thank you

Moldplus SA

Revision date: June 24, 2020